

4. Secure Fixing Rod to Tray Leg (Optional)


1. Loosen the preassembled bolts [F] on the fixing rod [E].
2. Assemble fixing rod [E] using bolts [F] to make TV TRAY foot more stable.

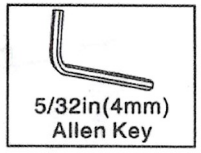

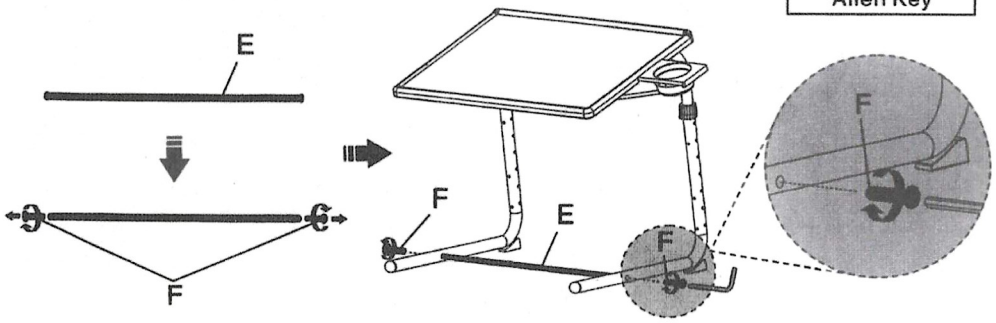

Disassemble fixing rod [E] if you want to fold the TV TRAY.

5. Fold For Easy Storage

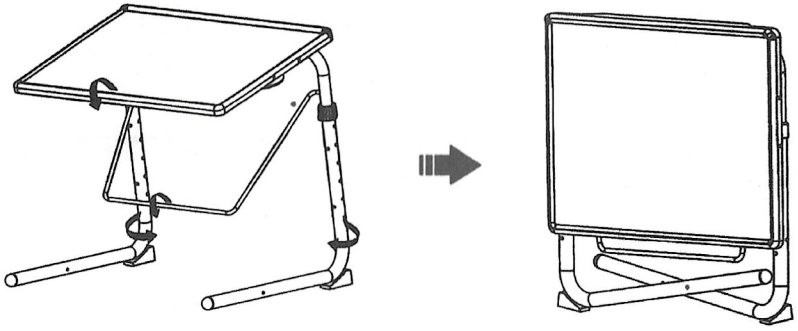

Note:
Press down the bumps on the tray legs [B], then rotate the legs as shown for easy storage

CAUTION!

TV TRAY IS NOT DESIGNED FOR ANYONE TO STAND ON, SIT ON, OR CHANGE BABIES ON


THE MANUFACTURER SHALL NOT BE RESPONSIBLE FOR ANY INJURIES CAUSED BY USING TV TRAY FOR THESE PURPOSES.

TV TRAY Instruction Manual



Model: TT11B

Supplied Parts and Hardware

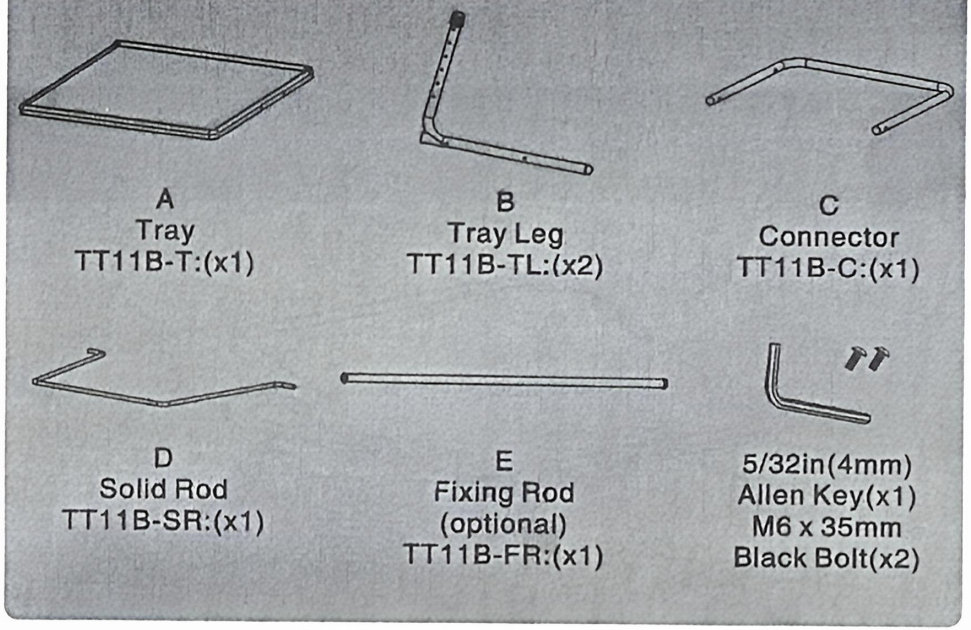

A
Tray
TT11B-T:(x1)

B
Tray Leg
TT11B-TL:(x2)

C
Connector
TT11B-C:(x1)


D
Solid Rod
TT11B-SR:(x1)

E
Fixing Rod
(optional)
TT11B-FR:(x1)


5/32in(4mm)
Allen Key(x1)
M6 x 35mm
Black Bolt(x2)


1. Secure the Tray Leg Assembly to the Tray

① Secure the tray legs [B]to connector [C]
② Secure the solid rod [D]to connector [C]
③ Attach the tray leg assembly to the hooks on the bottom of the tray [A]

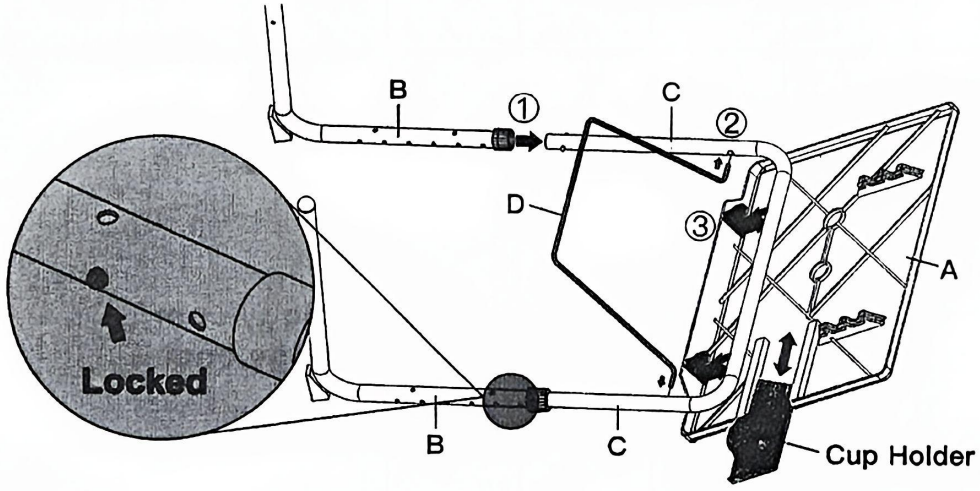

2. Adjust the Angle of the Tray

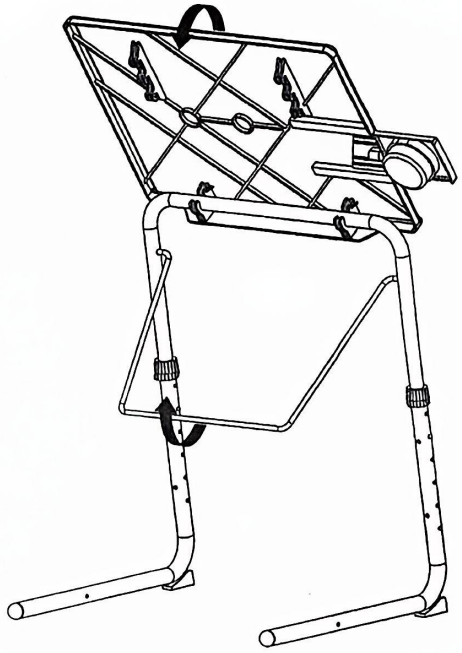

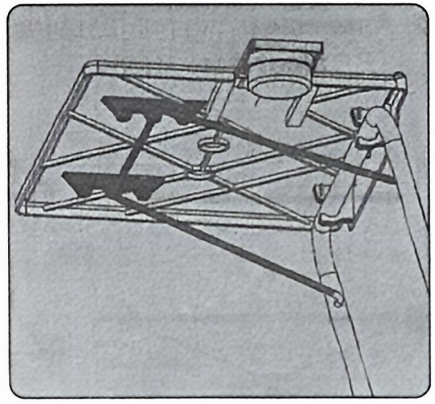

Snap solid rod into hooks to adjust the angle of the tray

Note: There are three angle levels to be adjusted.

3. Adjust the Height of the Tray

